

The MAGMAS framework: user manual

author: Guy A. E. Vandenbosch
date last modification: 18 May 2004

TABLE OF CONTENTS

1.	INTRODUCTION	4
1.1	Intended readership	4
1.2	Applicability statement	4
1.3	Purpose	4
1.4	How to use this document	4
1.5	Related documents	4
1.6	Conventions	4
1.7	List of acronyms and abbreviations	4
1.8	Problem reporting instructions	4
2.	OVERVIEW SECTION	5
2.1	Definition of the general physical structure	5
2.2	Overview of the analysis	5
2.3	Information to be supplied to the software (input)	5
2.4	Information supplied by the software (output)	5
2.4.1	network parameters	5
2.4.2	radiation parameters	5
3.	INSTALLATION SECTION	5
3.1	Directory and file information	6
3.2	file creation information	6
4.	INSTRUCTION SECTION	6
4.1	Starting up information	6
4.2	The user interface	6
4.2.1	General information	6
4.2.2	The main window	7
4.2.3	The file menu	7
4.2.3.a	Creating a new structure	7
4.2.3.b	Loading an existing structure	7
4.2.3.c	Saving the current structure	7
4.2.3.d	Saving under another name	8
4.2.3.e	Quitting the MAGMAS User Interface	8
4.2.4	The edit menu	8
4.2.4.a	Frequency parameters	8
4.2.4.b	Physical parameters	8

4.2.4.c	Excitation parameters	16
4.2.4.d	General parameters	17
4.2.4.e	Numerical parameters	17
4.2.4.f	Optimization parameters	18
4.2.5	The calculate menu	19
4.2.6	The View menu	19
4.2.6.a	Network parameters	19
4.2.6.b	Radiation parameters	20
4.2.6.c	Currents	20
4.2.6.d	Optimization plots	20
4.2.7	The Print menu	20
4.2.7.a	Printing a graph	20
4.2.7.b	Writing the graph data in a file	21
4.2.7.c	Exporting an S matrix to ADS	21
4.2.7.d	Configuring the default printer	21
4.2.8	The Info menu	21
5.	MAGMAS MESSAGES, WARNINGS AND ERRORS	21
5.1	Messages	21
5.2	Warnings	21
5.3	Errors	21
5.3.a	Memory violation errors	21
5.3.b	Input errors	22
	Physical error	22
	Numerical error	22
6.	REFERENCES	22

1. Introduction

1.1 *Intended readership*

This document explains how to use the MAGMAS software. It is intended to be used by new users while getting started and as a reference by experienced users.

1.2 *Applicability statement*

This user manual applies to the MAGMAS 3D release.

1.3 *Purpose*

The goal of this user manual is to explain how users have to work with the MAGMAS software. The manual can be used in two ways. For new users, the fastest way to get acquainted with the software is to read the instruction section while running the software and to try out all interactions between software and user described in this section. For experienced users the user manual can serve as a reference. The MAGMAS software is the implementation of the MAGMAS framework. This framework was developed to analyze general multilayered planar and quasi-3D structures. The detailed description of what a multilayered planar or quasi-3D structure is can be found in [1].

1.4 *How to use this document*

This manual is written under the assumptions that you have access to the MAGMAS software and that you run the MAGMAS software while reading or consulting this manual. The set up of this manual is thus based on interactivity. The MAGMAS software consists of a user interface and an analysis engine. This manual mainly describes the interactive actions with the user interface and the messages, warnings, and errors, produced by the engine.

1.5 *Related documents*

Within this manual it is assumed that you are familiar with the terminology used for planar and quasi-3D structures. In case you are not familiar with this terminology, you can consult the report on the physical structures which can be modeled with the MAGMAS framework [1]. There the planar structures themselves are explained in more detail.

1.6 *Conventions*

italic: The italic style is used for text which has to be inserted by the user.

bold: The bold style is used for text which has to be replaced by the appropriated information.

Example: **filename** has to be replaced by the correct name of the file under consideration.

<**key**>: This is a reference to the key on the keyboard with the name mentioned.

“**button**” or “**menu**”: This is a reference to a button or a menu within the MAGMAS software.

1.7 *List of acronyms and abbreviations*

(S)EEF: (Subsectional) Edge Expansion Functions

GF: Green's Function

IM: IMaginary part of a complex number

MAGMAS: Model for the Analysis of General Multilayered Antenna Structures

ADS: Advanced Design System, software package to design microwave circuits distributed by Agilent

N parameter: Natural network parameter

RE: REal part of a complex number

1.8 *Problem reporting instructions*

In case the software shows a problem, this can be reported to the MAGMAS developing team by phone/fax/email. Their representative is:

Prof. Guy A. E. Vandenbosch, ESAT-TELEMIC

Kasteelpark Arenberg 10, B-3001 Leuven, Belgium
 Tel. 32-16/32.11.10
 Fax. 32-16/32.19.86,
 email guy.vandenbosch@esat.kuleuven.ac.be.

2. Overview section

The MAGMAS software is being developed to analyze general planar and quasi-3D structures. The output consists of: network parameters (S matrix, Z matrix, Y matrix) and radiation parameters (far field patterns, both co- and cross-polar components, gain and axial ratio).

2.1 Definition of the general physical structure

See the report on the general physical structure [1]. This report allows the user to get an idea on which physical structures can be analyzed with the MAGMAS framework. The report does not bother with the details on how to insert these physical structures. This is described in full detail in the instruction section of this manual.

2.2 Overview of the analysis

This analysis is done by solving Maxwell's equations for these structures. For experts in the field, a complete description of the solving procedure is given in the report on the modeling procedure [2].

2.3 Information to be supplied to the software (input)

The information to be supplied to the software mainly consists of the physical structure to be analyzed, the frequencies at which it has to be analyzed, and the numerical parameters determining the accuracy of the analysis. A detailed description of all input information can be found in the instruction section of this document.

2.4 Information supplied by the software (output)

The output of the software concerns the important properties used by designers in the field to characterize planar structures: network parameters (important for all planar circuits) and radiation parameters (important for planar antennas).

2.4.1 network parameters

N parameters over a frequency band
 S parameters over a frequency band
 Z parameters over a frequency band
 Y parameters over a frequency band

2.4.2 radiation parameters

far field pattern at specific frequencies
 gain at specific frequencies
 radiation efficiency at specific frequencies

3. Installation section

The MAGMAS framework software consists of a user interface and an analysis engine. The MAGMAS user interface is written for X-Windows, the graphical shell of Unix or Linux. This means that at this moment MAGMAS only runs on Unix and Linux systems. At this moment it has been successfully installed on HP-stations, SUN-stations, and on PCs running Linux (several kernels). If you run an older version of Linux, it may be necessary to install extra files: `libc.so.6`, `libm.so.6`, and `ld-linux.so.2` in the directory `lib`. It is necessary to have a matlab5 license or a gnuplot license available on the computer where MAGMAS is installed (either matlab or gnuplot is used for visualization, matlab is commercially available, gnuplot is freeware).

3.1 Directory and file information

It is assumed that MAGMAS has been installed in the proper way on your computer. This means that there is a directory with the name 'magmas v ' (v is the version number of the MAGMAS software), which has a subdirectory called 'interface'. In the magmas v directory, the analysis engine executable (called magmas.eng) is put. In the interface directory, the user interface executable (called magmas.int) is put. If ftp is used, be sure that the transfer is done in binary mode. Also check the permissions of the executable files before starting to work with MAGMAS. If matlab is used for visualization, it is assumed that matlab is available under the directory '/software/matlab'. If matlab is not available under this directory, this directory has to be created and a link to the real matlab directory has to be made. In some cases the system manager of the computer system under consideration has to make a specific link (as root): type "ln -s /software/matlab/extern/lib/linux86/lib* /usr/lib". This link is to solve an internal matlab problem. If gnuplot is used for visualization, please be sure that it is installed properly during the linux installation. It is always possible to start the MAGMAS software from any other directory by typing within the call the correct path to the interface directory. To ease the calling of the MAGMAS engine it is advised that the system manager sets a link (as root): type "cd /bin" and "ln -s pathofengine/magmas.iem.". It is also recommended to enclose the directories of the interface and the engine in the paths of each MAGMAS user.

3.2 file creation information

Running MAGMAS causes a creation or reading of files. Input files for the transfer of data from the user interface to the analysis engine, intermediate results files, output files for the transfer of data from the analysis engine to the user interface. The input and output files are created within or read from the directory specified by the user within the user interface. The intermediate results files are created within the directory from where the MAGMAS software was called.

4. Instruction section

At the top instruction level the MAGMAS software is very simple. Basically the only tasks to accomplish are:

1. the insertion of the physical structure to be analyzed, the frequencies considered, and the numerical parameters determining the accuracy, a few parameters steering the solving procedure (the insertion is done with the user interface)
2. the starting of the analysis (the analysis is performed with the engine)
3. after the analysis has been completed, the selection of the output parameters to be visualized (this is done with the user interface)

4.1 Starting up information

Once logged in, you have to open a Terminal. You can go to any directory you prefer and can start MAGMAS by typing *path/magmasv/interface/magmas.int*. The name magmas.int can be replaced by a user-defined name just by renaming the magmas.int executable file. As a result the main MAGMAS window should pop up.

Starting up options:

- to choose a user-defined program title in stead of "MAGMAS User Interface" start up with *path/magmasv/interface/magmas.int -title program title*
- to choose a background color for all MAGMAS windows start up with *path/magmasv/interface/magmas.int -bg color*
- to choose a foreground color start up with *path/magmasv/interface/magmas.int -fg color*
- to choose a different letter type start up with *path/magmasv/interface/magmas.int -fn letter type*
- multiple options are allowed, the order of the options is arbitrary.

4.2 The user interface

4.2.1 General information

Choosing from a menu is done by putting the mouse cursor on the menu, by pushing the left mouse button, and while keeping this button pushed, going with the mouse cursor to your choice in the menu and letting go the left mouse button.

To give input you first put the mouse cursor on the appropriate input location and then you insert the input parameter using the keyboard.

Input with a certain dimension can be given in a user preferred unit, e.g. a length of 0.1 m can be inserted by typing *0.1* (meter is the standard unit used within the MAGMAS software) or *0.1 m* or *10 cm* or *100 mm*, etc., and a frequency of 10 GHz can be inserted by typing *1.e10* (Hertz is the standard unit used within the MAGMAS software) or *10 GHz* or *10000 MHz* or *1.e7 kHz*, etc..

When the input is complex, it has to be inserted by its real (marked RE) and imaginary (marked IM) part.

Whenever you have to give input to the interface, you will always find two buttons: “OK” and “Cancel”. The “OK” button is for acknowledging the input given. In case you push this button the interface really accepts the (new) input. The “Cancel” button is for canceling the input given. In case you push this button the interface does not replace the old input by the input just given. In many cases input parameters cannot be chosen completely freely. There is only a limited number of possibilities for the input. This is automatically taken into account by the interface by using the buttons “Previous” and “Next”. Pushing these buttons you can only choose between the possible input quantities.

Parameters which belong together are put in a frame with in many cases a frame title. The title refers to the type of information within the frame.

Input in a window can only be given when all subwindows of this window are closed.

4.2.2 The main window

Within the main menu, you find six menus; the “File” menu, the “Edit” menu, the “Calculate” menu, the “View” menu, the “Print” menu and the “Info” menu.

4.2.3 The file menu

Within MAGMAS a structure is named. The input and output parameters of this structure are put in files with names derived from this structure name.

If it exists in the directory, the structure ‘default’ is the structure that is used by MAGMAS as default, i.e. the structure automatically loaded whenever MAGMAS is started. This can thus be used to make user-defined pre-settings of the input parameters.

4.2.3.a Creating a new structure

Choose the button “New”. If you were busy with another structure and did not save the input, you first get a window with three buttons. “Save”: save the previous structure input, “Discard”: continue with the creation of a new structure without saving, and “Cancel”: cancel the decision to make a new structure. The selection of “New” generates a ‘File Requester Window’, which allows to go through the directory structure of the disk. In this way you can select the directory in which the new structure has to be put. Once arrived in the right directory, you will get a list of all structures already available in that directory. You can choose from this list, in case you want to redefine this structure completely, or at the right you can enter a new name. At the top you will find the complete path of the directory you’re in.

4.2.3.b Loading an existing structure

Choose the button “Load”. If you were busy with another structure and did not save the input, you first get a window with three buttons. “Save”: save the previous structure input, “Discard”: continue with the loading of the existing structure without saving, and “Cancel”: cancel the decision to load the existing structure. The selection of “Load” generates a ‘File Requester Window’, which allows to go through the directory structure of the disk. In this way you can select the directory in which the existing structure is put. Once arrived in the right directory, you will get a list of all structures already available in that directory. You can choose from this list or at the right you can enter the name. At the top you will find the complete path of the directory you’re in.

4.2.3.c Saving the current structure

Choose the button “Save”. If a name was not yet chosen for the structure (then the structure is named “Untitled”), see ‘Saving under another name’.

4.2.3.d Saving under another name

Choose the button “Save as”. The selection of “Save as” generates a ‘File Requester Window’, which allows to go through the directory structure of the disk. In this way you can select the directory in which the structure has to be put. Once arrived in the right directory, you will get a list of all structures already available in that directory. You can choose from this list, in case you want to redefine this structure using the current input, or at the right you can enter a new name. At the top you will find the complete path of the directory you’re in.

4.2.3.e Quitting the MAGMAS User Interface

Choose the button “Quit”. If changes have been made and you did not save the current structure, you will get a window offering the possibility to cancel the quitting in order to be able to save the current structure.

4.2.4 The edit menu

Under this menu the physical structure is inserted (for a new structure) or edited (for an existing structure). This editing is subdivided in six parts: the frequency part, the physical parameters part, the excitation part, the general parameters part, the numerical parameters part, and the optimization part.

4.2.4.a Frequency parameters

Choose the button “Frequency Parameters” to enter the frequency window.

In the top part of the window, the frequency band of interest to the user can be inserted in two ways. The first is the standard way: by providing the begin frequency, the end frequency, and the number of frequency points. After pushing the button “Fill Band”, in this case an equidistant frequency distribution will be calculated within the user interface. This list can be further modified by choosing within the frequency window the “Edit” button. Within the subwindow appearing then, you can add frequency points (“Add Before” means just before the current frequency point in the list, “Add Behind” means just behind the current frequency point in the list) or delete frequency points. The second is the direct using of the subwindow to insert the frequency points of interest.

In the bottom part of the window, the frequencies at which the far field and the output parameters derived from it have to be calculated are inserted separately. THE LIST OF FREQUENCIES DEFINED HERE HAS TO BE A SUBLIST OF THE LIST OF FREQUENCIES DEFINED IN THE FREQUENCY BAND OF INTEREST PART. Here the standard way is to define a frequency point list by adding frequency points (“Add Before” means just before the current frequency point in the list, “Add Behind” means just behind the current frequency point in the list) and deleting frequency points. The alternative way is taken by choosing the “Fill Band” button and by inserting a begin frequency, an end frequency and a number of frequency points. In this case an equidistant frequency distribution will be calculated within the user interface.

4.2.4.b Physical parameters

If you are not familiar with the structure terminology used within the MAGMAS framework, please refer to [1], where a detailed description is given.

Choose the button “Physical Parameters” to enter the physical parameters window. The window is subdivided in eight parts. Left at the top is the ‘Layer Structure’ part. Below this you can find the ‘PTLS Type’ part, the ‘Element Type’ part, the ‘Place Elements’ part, and left at the bottom the ‘Connect Elements’ part, respectively. Right at the top are the graphical representation of the layer structure, below this the graphical representation of the planar structure, and right at the bottom the layer structure parameter view part.

Layer structure

The positive coordinate system used within MAGMAS is defined with respect to the layer structure. The z axis is directed normal to the layer structure. The x and y axis are directed parallel to the layer structure.

Textual part

LAYER PARAMETERS: these parameters are the permittivities and permeabilities parallel (transversal) and normal (longitudinal) to the layer structure, and the thickness. In the case of a

shielding layer the permittivities are real and the conductivity is the layer parameter that models the losses in the layer. In the case of a common dielectric layer the permittivities may be complex, which models the losses in the layer, and no conductivity can be inserted. Only in the case of a uniaxial dielectric layer the transversal and longitudinal quantities differ. In the case of an isotropic dielectric layer or a conductor they are identical.

The “Planar”/“Conformal” toggle allows to choose the type of layer structure. In the case of a conformal layer structure, the radius of the inner cylindrical layer has to be inserted. **ONLY PLANAR LAYER STRUCTURES ARE IMPLEMENTED YET.**

SHIELDING LAYERS: With the top “Previous” and “Next” buttons the current shielding layer is set. The rightmost shielding layer is by definition shielding layer 0. The shielding layers are counted from right to left. The current shielding layer can be edited by choosing the “Edit” button. This button generates a subwindow where the layer parameters can be modified. The rightmost and leftmost shielding layers of the complete structure are HALF SPACES. They extend up to infinity. Although these half spaces have an infinite thickness you can enter a different thickness. This however has no effect because MAGMAS always assumes an infinite thickness.

SUBREGIONS: With the bottom “Previous” and “Next” buttons the current subregion is set. The rightmost subregion is by definition subregion 1. The subregions are counted from right to left. With the “Add Before” button a subregion can be added at the right of the current subregion, with the “Add Behind” button a subregion can be added at the left of the current subregion. With the “Delete” button a subregion can be deleted. With the “Edit” button a subregion can be edited. Adding a subregion generates a subwindow where the parameters of the new shielding layer can be inserted. When this is done a new subwindow is generated where the number of dielectric layers in the new subregion can be defined. The “Add Before” and “Add Behind” buttons allow to add a layer at the right or at the left of the current dielectric layer. The “Delete” button allows to delete the current layer. The “Edit” button allows to edit the current layer. Editing a subregion generates a subwindow. The “Add Before” and “Add Behind” buttons in this subwindow allow to add a layer at the right or at the left of the current dielectric layer. The “Delete” button allows to delete the current layer. The “Edit” button allows to edit the current layer.

DIELECTRIC LAYERS: The dielectric layers are counted per subregion from right to left. The rightmost dielectric layer within each subregion is layer 1 of this subregion.

LAYER INTERFACES: The layer interfaces are also counted per subregion from right to left. The rightmost layer interface within each subregion (the interface between the right shielding layer and layer 1 of this subregion) is layer interface 0 of this subregion. Layer interface l can thus be found at the left of layer l .

FINITE LAYER STRUCTURE: By default MAGMAS assumes an infinite layer structure. The finiteness of a layer structure can be inserted by pushing the “Finite” button, after which the “Edit” button has to be pushed to further characterize the finiteness. This generates a subwindow where you can push a “Physical Shape” button or a “Method” button. The “Physical Shape” button generates a subwindow where you can select a rectangular layer structure, a circular layer structure, or you can invoke the layer structure designer to define the shape of the layer structure yourself. This works in the same way as the patch and aperture designer (see further). The “Method” button allows to choose the technique to model the finiteness of the layer structure. The possible techniques are 2D SIE (2D Surface Integral Equations) and 3D VPO (3D Volume Physical Optics). Do not use the “User Defined” buttons. This will generate subwindows where it is possible to choose non-standard truncations of the layer structure (with small vertical walls at the truncation for example) and to describe in detail the technique chosen. This is intended for expert users.

Graphical part

The layer structure is graphically depicted (side view: yz-cut seen from the negative x-direction) right at the top. The half spaces are in blue, the other shielding layers are in orange and the dielectric layers are in gray. The numbering of the shielding layers and dielectric layers is given. The total thickness of the layer structure excluding the half spaces is given below the figure.

You can check the layer parameters of a certain layer by putting the mouse cursor on this layer and pushing the left mouse button. Right at the bottom the layer parameters of this layer are then given. The “Zoom Layer Structure” button there allows to zoom in on the layer structure.

Planar Transmission Line Structures (PTLS)

Pushing the button “Transmission Lines”, the main PTLs subwindow is generated. With the “Previous” and “Next” buttons the current PTLs type is set. With the “Add” button a new PTLs type can be added. This button generates a PTLs type subwindow for the new PTLs type. With the “Delete” button the current PTLs type can be deleted. With the “Edit” button the current PTLs type can be edited. This button generates a PTLs type subwindow for the current PTLs type. The PTLs type subwindow is subdivided in five parts. At the left the textual parts: at the top the ‘PTLS Type Name’ part, below the ‘Strips’ part and the ‘Slots’ part, and at the bottom the ‘Characteristic Impedance’ part. At the right the graphical part.

Textual part

In the ‘PTLS Type Name’ part, you can enter a user defined name for the PTLs type.

In the ‘Strips’ part, using the top “Previous” and “Next” buttons you can select the current subregion. Below this you can see how many strips are already present in the current subregion. Pushing the bottom “Previous” and “Next” buttons you can select the current strip. With the “Delete” button you can delete this strip, with the “Edit” button you can edit it. With the “Add” button you can add a new strip.

In the ‘Slots’ part, using the top “Previous” and “Next” buttons you can select the current shielding layer. Below this you can see how many slots are already present in the current shielding layer. Pushing the bottom “Previous” and “Next” buttons you can select the current slot. With the “Delete” button you can delete this slot, with the “Edit” button you can edit it. With the “Add” button you can add a new slot.

In the ‘Characteristic Impedance’ part, you can select how the characteristic impedance of the PTLs has to be calculated. For a PTLs consisting only of strips or slots, this is done automatically.

Adding or editing a strip or slot generates a PTLs component subwindow. In this component subwindow you can enter or modify the COMPONENT PARAMETERS, the parameters describing the component in question.

STRIP component parameters:

- 1) (layer) interface containing the strip: See section Layer structure.
- 2) location of the center: The lateral coordinate of the position of the center of the strip with respect to the reference axis of the PTLs under consideration.
- 5) width of the strip.
- 7) number of subdivisions along the width: used in the analysis for the equidistant subsectioning of the strip along the width.
- 8) conductivity.
- 9) thickness: At this moment MAGMAS does not take into account this thickness. It always assumes zero thickness in the analysis.

The modal current combining coefficients are coefficients to be used when a combination of the modes is to be used.

SLOT component parameters:

- 1) location of the center: The lateral coordinate of the position of the center of the slot with respect to the reference axis of the PTLs under consideration.
- 2) width of the slot.
- 3) number of subdivisions along the width: used in the analysis for the equidistant subsectioning of the slot along the width.

The modal voltage combining coefficients are coefficients to be used when a combination of the modes is to be used.

Element types

With the “Previous” and “Next” buttons the current element type is set. With the “Add normal” button a new regular element type can be added. This button generates an element type subwindow for the new regular element type. With the “Add S-port” button a new S-port element type can be added. This button generates an element type subwindow for the new S-port element type. With the “Delete” button the current element type can be deleted. With the “Edit” button the current element type can be edited. This button generates an element type subwindow for the current element type. The regular element type subwindow is subdivided in four parts. At the left the textual parts: at the top the ‘Element Type

Name' part, below the 'Components in Subregions' part, and at the bottom the 'Components in Shielding Layers' part. At the top right the graphical part. At the bottom right the PTLs part. The "3D view" button below generates a window where the element type can be looked at from an angle to be inserted by the user. With the mouse buttons, this view can be scaled and rotated in 3D space. This is very handy to check the proper location of the components inserted.

Textual part

In the 'Element Type Name' part, you can enter a user defined name for the element type.

In the 'Components in Subregions' part, using the top "Previous" and "Next" buttons you can select the current subregion. Below this you can see how many patches, walls, and probes are already present in the current subregion. By pushing one of the component buttons "Patch", "Wall", or "Probe" you can select the component you want to treat. Pushing the bottom "Previous" and "Next" buttons you can select the current component of the selected component type. With the "Delete" button you can delete this component, with the "Edit" button you can edit it. With the "Add" button you can add a new component of the selected component type.

In the 'Components in Shielding Layers' part, using the top "Previous" and "Next" buttons you can select the current shielding layer. Below this you can see how many apertures are already present in the current shielding layer. Pushing the bottom "Previous" and "Next" buttons you can select the current aperture. With the "Delete" button you can delete this component, with the "Edit" button you can edit it. With the "Add" button you can add a new aperture.

In the PTLs part, using the "Previous" and "Next" buttons you can select the current PTL. Above this you can see how many PTLs are already present. With the "Delete" button you can delete this PTL, with the "Edit" button you can edit it. With the "Add" button you can add a new PTL.

Adding or editing a component generates a component subwindow. In this component subwindow you can enter or modify the COMPONENT PARAMETERS, the parameters describing the component in question.

PATCH component parameters

- 1) (layer) interface containing the patch: See section Layer structure.
- 2) position of the reference point: This position is a relative position with respect to the reference point of the element type in question.
- 3) conductivity.
- 4) thickness: At this moment MAGMAS does not take into account the patch thickness. It always assumes zero thickness in the analysis.
- 5) patch shape: Rectangular (i.e. patch = rectangle) or general. Pushing the buttons "Rectangular" or "General" causes the starting up of the 'Patch and aperture designer'.
- 6) patch type: Active, i.e. the user imposes a known electric current onto the patch, or passive, i.e. the patch current is generated by incident fields and is calculated during the analysis. Pushing the button "Active" causes the starting up of the 'Patch and aperture current designer'.

WALL component parameters

- 1) left (layer) interface: interface where the cylindrical wall starts.
- 2) right (layer) interface: interface where the cylindrical wall stops.
- 3) position of the reference point: This position is a relative position with respect to the reference point of the element type in question.
- 4) conductivity.
- 5) Polyline of the wall: Pushing the button "Draw" causes the starting up of the 'Polyline designer'.
- 6) number of subdivisions in the z-direction of the layers: defines the number of segments in the z direction in the layers containing the wall.
- 7) number of subdivisions polyline: defines the number of segments of the line segments of the polyline.
- 8) "SideView": pushing this button causes the starting up of the Wall Designer. Using this designer, segments of the cylindrical wall can be deleted in order to form a wall.
- 9) wall type: Active, i.e. the user imposes a known electric current onto the wall, or passive, i.e. the wall current is generated by incident fields and is calculated during the analysis. Pushing the button "Active" causes the starting up of the 'Wall current designer'.

PROBE component parameters

- 1) left and right layer interface of the probe: Within MAGMAS a probe has to begin and end at a layer interface. The left layer interface is the layer interface at the left of the probe, the right layer interface is the layer interface at the right of the probe. See section Layer structure.
- 2) position of the probe center: This position is a relative position with respect to the reference point of the element type in question.
- 3) radius of the probe
- 4) radius of the probe discs: Within MAGMAS a probe always has to be located between two planar electric conductors (conductive shielding layers, patches, and lines). The probe is modeled using attachment current modes taking care of the continuous flow of electric current between the probe cylinder itself and the planar conductors. The part of the attachment modes on the planar conductors flows on so-called probe discs that are disc spaced parts of the planar conductors. The larger the radius of these probe discs is, the more stable the calculation will be. However, it is evident that for physical reasons, the probe discs have to be completely embedded within the planar conductors. A basic rule to determine a minimum probe disc radius is: $[\text{probe disc radius}] \times [\text{highest probe mode number} + 1] / [\text{length probe}] > 1.5$ (see also highest probe mode number).
- 5) probe conductivity: This is the conductivity of the probe cylinder.
- 6) highest probe mode number solved numerically: Within MAGMAS the distribution of the electric current on the probe in the longitudinal direction is taken into account by decomposing this distribution into cosinusoidal modes. The modes with mode number 0 up to the highest probe mode number are determined rigorously, the modes with mode number above the highest probe mode number are determined in an approximate way using analytical expressions. A basic rule to determine a minimum value is: $[\text{probe disc radius}] \times [\text{highest probe mode number} + 1] / [\text{length probe}] > 1.5$ (see also radius of the probe discs). **ATTENTION:** values higher than 0 will result in a much higher probe computation time.
- 7) number of subdivisions in the z-direction: Within the modeling of the probe, integrals over the probe length occur which have to be evaluated numerically. The number of segments used for this numerical evaluation is inserted here. Values between 50 and 100 are advised.
- 8) probe type: Active, i.e. the probe is fed by a coaxial feed, or passive, i.e. the probe is just a conductor connecting two planar conductors located in two different layer interfaces.
- 9) radius of the coaxial aperture: Only in the active case.
- 10) characteristic impedance of the coaxial feed: Only in the active case.
- 11) position of the coaxial feed: Only in the active case. Left = in the left layer interface of the probe, right = in the right layer interface of the probe.
- 12) highest mode number for probe-feed coupling: Only in the active case. Within MAGMAS the coupling between probe and coaxial feed is calculated analytically as an infinite series over the modes of the probe. You can insert here how many of the series terms you want to take into account. Values between 20 and 100 are advised.

APERTURE component parameters

- 1) position of the aperture reference point: This position is a relative position with respect to the reference point of the element type in question.
- 2) aperture shape: Rectangular (i.e. aperture = rectangle) or general. Pushing the buttons “Rectangular” or “General” causes the starting up of the ‘Patch and aperture designer’.
- 3) aperture type: Active, i.e. the user imposes a known magnetic current onto the aperture, or passive, i.e. the aperture current is generated by incident fields and is calculated during the analysis. Pushing the button “Active” causes the starting up of the ‘Patch and aperture current designer’.

PTLS component parameters:

Within MAGMAS **A PTLS ALWAYS HAS TO BE LINKED TO ANOTHER PTLS OR HAS TO BE FED BY A LINE FEED** (see section Connection elements)

- 1) PTLS type: the PTLS added is of one of the types defined before.
- 2) location of the reference point: The coordinates of the starting point of the axis of the PTLS. The connection with the other PTLS or with the line feed is automatically made at the other

- side of the PTLs. This position is a relative position with respect to the reference point of the element type in question.
- 3) length of the PTLs: the distance between the starting point of the PTLs and the location where the link with the other PTLs or the line feed will be made. Since this length is used for two purposes: a) it defines the part of the PTLs with which full mutual coupling is taken into account, and b) it is used to derive the characteristics of the PTLs (propagation coefficients and characteristic impedances), it has to be sufficiently large, i.e. larger than ca. a quarter wavelength.
 - 4) number of subdivisions along the length: used in the analysis for the equidistant subsectioning of the PTLs along the length.
 - 5) rotation angle: the angle between the x-axis and the direction of the PTLs.

Graphical part

In the graphical part the element type under consideration is depicted: both a side view (yz-cut seen from the negative x-direction, y and z direction on a different scale) of the layer structure with the components, including PTLs's, embedded in it and a front view (xy-cut seen from the positive z-direction, on scale) is given. The middle of the front view is the reference point of the element type.

Colors used:

- patch: copper-orange
- wall: brown
- probe: copper-orange, probe discs: red
- aperture: blue
- strip: brown
- slot: light blue

The patch and aperture designer

The patch and aperture designer allows to design arbitrary patch and aperture shapes.

“Rectangular” button

In the case the rectangular shape is selected, a subwindow is generated where you can enter the size of the rectangle along the x-axis, the number of subdivisions along the x-axis, the size of the rectangle along the y-axis, and the number of subdivisions along the y-axis. The number of subdivisions is used in the subsectioning of the component. A minimum of 20 subdivisions per wavelength is advised. Pushing the “Draw” button generates the design window. With the “File” menu you can save the patch/aperture under a user-defined name. **INSERTING/CHANGING THE DATA ALWAYS HAS TO BE FOLLOWED BY A DRAWING ACTION. OTHERWISE THE NEW DATA ARE NOT ACCEPTED BY MAGMAS.**

“General” button

In the case the general shape is selected, a subwindow is generated where you can enter the size of the design window along the x-axis, the number of subdivisions along the x-axis of this window, the size of the design window along the y-axis, and the number of subdivisions along the y-axis of this window. The number of subdivisions is used to make a drawing grid. The number needed strongly depends on the exact shape of the component you want to draw and which design method you want to use. Pushing the “Bricks” button invokes the bricks method, pushing the “Outlines” button invokes the outlines method (see section Design window). A minimum of 20 subdivisions per wavelength is advised. Pushing the “Draw” button generates the design window. With the “File” menu you can load or save a patch/aperture with a user-defined name. This option opens the possibility to re-use an already designed patch/aperture in another planar structure.

Design window

In the design window you can draw a new patch/aperture or modify an existing one. The “Clear” button can be used to clear the design window from patches/apertures drawn in it.

BRICKS METHOD: Using this method you can build the patch/aperture out of rectangular ‘bricks’. By clicking the left mouse button the segment where the mouse cursor is located is added to the patch/aperture. If it has no neighbor, it turns black, which means that it is impossible in the modeling to take this segment into account. In other words, this means that the segment is not really added to the

patch/aperture. If it has at least one neighbor it turns yellow, which means that the segment is really added. With the right mouse button you can delete bricks. Continuously pushing a mouse button and sliding over the design window allows to continuously add or delete bricks. **WHEN THE BRICKS ARE ABLE TO FOLLOW THE CIRCUMFERENCE OF THE PATCH/APERTURE PERFECTLY, THIS DESIGN METHOD IS VERY STABLE.** It is possible to start from a rectangular shape and to modify the shape using the bricks method. The shape type will automatically be changed into General.

OUTLINE METHOD: Using this method you can design the patch/aperture by drawing an arbitrary polygon. Clicking the left mouse button defines a point in the design window. The second point defined is automatically connected to the first point, the third point to the second point, etc., with a red line. Clicking the middle mouse button connects the point defined last to the first point, in this way closing the polygon. A connection can only be made and the corresponding point thus defined if it does not cross an already existing connection. Clicking the right mouse button removes the last connection defined and, except for the last connection, the point corresponding to it. Once closed the polygon is automatically meshed in rectangles and triangles and turns yellow. In the “Options” menu you can choose between two versions: the “Any point” version, i.e. any point in the design window can be defined, or the “Raster line” version where only points on raster lines can be defined. If you click a point, the raster point closest to the point clicked will be defined. At any time you can see at the top the x and y coordinates of the point that would be defined if you clicked at that moment. **THE MESHER AVAILABLE AT THIS MOMENT WITHIN MAGMAS IS NOT FULLY OPTIMIZED. SINCE THE MESHING IS IMPORTANT IN RELATION TO THE QUALITY OF THE RESULTS, IN CASE TRIANGLES ARE USED PLEASE BE CAREFUL WITH THE INTERPRETATION OF THE RESULTS. A MUCH MORE PERFORMANT MESHER WILL BECOME AVAILABLE IN A FUTURE RELEASE OF MAGMAS.**

The patch and aperture current designer

The patch and aperture current designer allows to impose a user-defined electric current on a patch and a user-defined magnetic current on an aperture. This current is defined as a function over the xy plane for the x-directed current and a function over the xy plane for the y-directed current. At this moment these functions can be entered in MATLAB format. For patches, with the “view current” button you can visualize the current. For apertures, visualization is not supported within this MAGMAS version.

The polyline designer

You can enter the size of the design window along the x-axis, the number of subdivisions along the x-axis of this window, the size of the design window along the y-axis, and the number of subdivisions along the y-axis of this window. The number of subdivisions is used to make a drawing grid. The number needed strongly depends on the exact shape of the polyline you want to draw. Pushing the “Draw” button generates the design window.

Design window

In the design window you can draw a new polyline or modify an existing one. The “Clear” button can be used to clear the design window from polylines drawn in it.

You can easily design a polyline by using the mouse buttons. Clicking the left mouse button defines a point in the design window. The second point defined is automatically connected to the first point, the third point to the second point, etc., with a red line. Clicking the middle mouse button finishes the polyline design. This is marked by turning the polyline color into brown. **CROSSING OF THE LINES OF THE POLYLINE IS NOT ALLOWED.** Clicking the right mouse button removes the last connection and the point corresponding to it.

In the “Options” menu you can choose between two versions: the “Any point” version, i.e. any point in the design window can be defined, or the “Raster line” version where only points on raster lines can be defined. If you click a point, the raster point closest to the point clicked will be defined. At any time you can see at the top the x and y coordinates of the point that would be defined if you clicked at that moment.

Overlapping components

Two patches, a strip and a patch, two apertures, or a slot and an aperture may overlap. However, in these cases, **THE TWO SUBMESHERS OF THE COMMON PART OF THE TWO OVERLAPPING COMPONENTS HAVE TO FOLLOW STRICT RULES.** Only in this case

MAGMAS will perform the analysis. The submesh of the common part of one of the two overlapping components has to be defined in such a way that each segment of the common part of the other component consists exactly of a number of segments of the submesh of the first component considered. This feature can be used to connect components defined by small segments with components defined by larger segments. The small segments do not have to be used throughout, which would result in a much higher total number of segments.

Connected components

Patches, strips and patches, apertures, or slots and apertures may touch. Touching is defined here as: two components touch if parts of the circumferences of the two components coincide. MAGMAS will consider the touching components as connected (i.e. electric or magnetic currents flow from one touching component to another). The meshing will be automatically adapted in the analysis engine. Patches and walls, or strips and walls may touch. Touching is defined here as: an xy directed edge of a wall in a layer interface is partially located within a patch or strip. There are strict rules in this case for the segmenting of both the patch/strip and wall. All the edges of the wall segments located in the patch/strip have to be located completely within segments of the patch/strip. Otherwise the mesher in the analysis engine will subdivide the wall segments in subsegments, which is not allowed in this MAGMAS version. Segments on patches/strips may be subsegmented. Patches and walls, or strips and walls may also cross, which means that an intersecting line exists. The same rules for the segmenting of both the patch/strip and wall as in the case of touching hold.

Place elements

Within MAGMAS the Element Type part is used to define element types. The real positioning of elements of the different types in a structure is done in this part.

With the top “Previous” and “Next” buttons you can select the current element type.

“Add Element” button: With this button you can add a single element. A subwindow is generated where you can insert the element placement type. Fixed means that you really fix the position of the element. In this case you can insert the coordinates of the reference point and the rotation angle of the element. Free means that you tell MAGMAS that there is indeed an element to be added, but the exact position will be defined later in the Connect Elements part.

“Add Array” button: With this button you can add an array of elements. A subwindow is generated where you can insert the coordinates of the reference point of the first element of the array, the rotation angle of this first element, the number of elements in the first translation direction, the number of elements in the second translation direction, the translation vector in the first direction, the translation vector in the second direction, the rotation angle in the first direction, the rotation angle in the second direction. A rotation angle defines the progressive rotation for consecutive elements in the direction in question.

NOTE THAT ELEMENTS OF THE SAME TYPE HAVE TO BE INSERTED

CONSECUTIVELY. It is thus not allowed to insert an element of a different type between two elements of the same type.

Once all the elements are defined using the “Add Element” and “Add Array” buttons, you can select a specific element using the current element “Previous” and “Next” buttons and delete this element or edit the parameters of this element by pushing the “Delete” or “Edit” buttons.

You can specify whether you want to repeat the complete structure you have defined up to now as element in an **INFINITE ARRAY** or not. Pushing the button “Single structure” you select the option of keeping the structure as defined up to now. Pushing the button “Infinite structure” you select the option to create an infinite array. This button will generate a subwindow where you can enter whether you want a linear or planar infinite array, the infinite array translation vector(s), the infinite array rotation angle(s), and the number of rings. The number of rings is a numerical parameter used in the analysis of the infinite array. It determines how many rings are actually taken into account during the analysis. Which number to insert is thus strongly depending on the convergence of the infinite array problem. You can check this by doing a small convergence study, e.g. comparing the results for 10, 100, and 1000 rings. It is possible that you do not observe any convergence due to strong coupling between the elements. At this moment, no solution for this problem is implemented. A solution will be available in the next release of MAGMAS.

Connect elements: PTLs LINKS, PTLs FEEDS

WITHIN MAGMAS EACH PTLIS OF EACH ELEMENT OF EACH ELEMENT TYPE HAS TO BE CONNECTED EXACTLY ONCE, I.E. LINKED TO ANOTHER PTLIS OR FED BY A PTLIS FEED. In the connect elements part you can make these connections.

With the “Previous” and “Next” buttons you can select the current connection.

“Add” button: With this button you can add a connection. Pushing this button generates a subwindow where you can insert the connection parameters.

“Delete” button: With this button you can delete the current connection.

“Edit” button: With this button you can edit the current connection. Pushing this button generates a subwindow where you can modify its connection parameters.

Connection parameters

1. Connection type: Line Link or Line Feed. A LINE LINK means that in the structure two PTLIS's (defined within two different elements) are linked by a third PTLIS. This is only possible if the two PTLISs of the two elements 1. are of the same type, and 2. are directed towards each other. This is automatically checked by MAGMAS. You can only insert connections that fulfill these conditions. Within the analysis it is assumed that the third line only supports the fundamental PTLIS modes. No coupling with this PTLIS is taken into account. The two PTLIS's of the two elements connected also support higher order modes and all coupling with these PTLIS's is taken into account. A LINE FEED means that the PTLIS is assumed to be fed by its fundamental modes incident at its end. In this case there is no second element and line. These parameters can thus not be inserted in this case.
2. First element of the connection: This is the element containing the first of the connected PTLIS's.
3. First element 's line: This is the PTLIS of this element connected.
4. Second element of the connection: This is the element containing the second of the connected PTLIS's. MAGMAS automatically allows only second elements which can really be connected to the first element. Elements of the placement type free do not have to fulfill the third linking condition. Here the definition of the link is also the definition of the exact positioning of such an element. After the linking of such an element it is also really shown in the graphical representation part.
5. Second element 's line: This is the PTLIS of this element connected. MAGMAS automatically selects the possible PTLIS's.
6. (global) Length of link: In the case of a line link, this is the length of the global line, i.e. the distance between the two starting points of the two connected lines. The global line is thus composed out of three pieces: 1. the first line of the connection (embedded within the first element of the connection), 2. the second line of the connection (embedded within the second element of the connection), and the line linking the two. As you can see the lengths of the two lines connected have no effect at all on the global line length. This is directly inserted within MAGMAS. The lengths of the lines connected only affect the part of the global line with which coupling is taken into account.
7. Position of reference plane: In the case of a line feed, this is the distance between the starting point of the line and the position of the reference plane on this line.

Graphical representation of the planar structure

In this part you can see a front view (xy-cut seen from the positive z-direction, on scale) of the global so-called ‘single structure’, even in case you have inserted an ‘infinite structure’ (see section Place elements). The infinite repeating of the single structure in this case is not shown. The current element selected in the Place elements part is shown in a red box. Connections are shown as red lines (line links) or small red rectangles at line ends (line feeds). The current connection selected in the Connect elements part is marked by showing the two corresponding elements in two white boxes.

4.2.4.c Excitation parameters

Excitations do not have to be known for the calculation of S, Z, or Y parameters, or for the calculation of far field parameters generated by a single port excited. They have to be known however for the calculation of the far field parameters of the complete structure as fed in real circumstances. The excitations within MAGMAS are inserted in several steps.

Choose the button “Excitation Parameters” to enter the corresponding subwindow.

The first step is the definition of the relation between all the feeds present **WITHIN THE ELEMENT TYPES**. This is done in the top part of the window. The possible feed types here are: the active patch, the active wall, the active aperture, and the active probe (the coaxial feed). The physical interpretation of an excitation is: for an active patch and aperture it is the complex coefficient with which the active currents defined in these components have to be multiplied in order to get the physically present current, for an active probe it is the complex amplitude of the fundamental mode component of the exciting

electric field distribution in the coaxial aperture. With the top “Previous” and “Next” buttons you can select the current element type. MAGMAS automatically shows the number of ports within this type. With the bottom “Previous” and “Next” buttons you can select the current port. MAGMAS shows automatically the nature of the port (active patch, wall, aperture, or probe). With the “Edit” button you can edit the complex excitation of this port (amplitude and phase). With the “Update Elements” button you impose the (new) internal relations for this element type to all elements of this type. Once this step is done the relation between the internal excitations of the elements are fixed.

The second step is the definition of the relation **BETWEEN FEED COMBINATIONS OF THE ELEMENTS**. This is done in the second part of the window by defining functions of x and y , both for amplitude and phase and for each element type. The meaning of an amplitude function $A(x,y)$ and phase function $P(x,y)$ is that an element located at (x,y) of an element type with internal feed excitation amplitudes a_1, a_2 , etc., and phases p_1, p_2 , etc., shows global excitation amplitudes for these feeds equal to $A(x,y)*a_1, A(x,y)*a_2$, etc., and global phases equal to $P(x,y)+p_1, P(x,y)+p_2$, etc.. In MAGMAS the amplitudes are expressed in dB and the product in the amplitude case becomes a summation also. With the “Previous”, “Next” and “Edit” buttons in this part you can insert all necessary functions. With the “Update Elements” button you impose the (new) functions for this element type to all elements of this type.

After the previous two steps, a third step is possible. In the third part of the window, you can edit each individual port of each element separately. You can use this to modify what you have inserted in the two previous steps. With the top and bottom “Previous” and “Next” buttons you can select the current element and the current port within this element. With the “Edit” button you can then edit the excitation amplitude and phase of this port. Remark that the amplitude and phase shown at first are the amplitude and phase taking into account the excitation laws within the element type in question defined in step one and the functions defined in step two.

In the fourth part of the window, you can insert the line feed excitations. The physical interpretation of such an excitation is that it is the complex amplitude of a fundamental PTL mode incident at the line feed position. With the top “Previous” and “Next” buttons you can select the current line feed. With the bottom “Previous” and “Next” buttons you can select the current line feed mode. With the “Edit” button you can then edit the excitation amplitude and phase of this port.

4.2.4.d General parameters

Choose the button “General Parameters” to enter the corresponding subwindow. Within this window you can enter the far field parameters: 1. the number of elevation angles for far field evaluation, and 2. the number of azimuth angles for far field evaluation. The far field is evaluated in a spherical coordinate system. The elevation angle is also marked ϑ . In the right half space it is the angle between the positive z -axis and the direction under consideration. In the left half space it is the angle between the negative z -axis and the direction under consideration. The azimuth angle (also marked Φ) is the angle between the projection of the direction under consideration in the xy -plane and the x -axis.

Example: If you choose for elevation 90 and for azimuth 4, both in the right and the left half space the far field will be calculated in the half-planes defined by $\Phi=0, \Phi=\pi/2, \Phi=\pi$, and $\Phi=3\pi/2$, for the angles $\vartheta=0^\circ, 1^\circ, 2^\circ, \dots, 89^\circ$.

The write intermediate results option is only important for MAGMAS designers and not for MAGMAS users. Pushing “Yes” causes the software to generate 1. additional intermediate results files, and 2. plotting facilities.

4.2.4.e Numerical parameters

Choose the button “Numerical Parameters” to enter the corresponding subwindow. Within this window you can enter the numerical parameters. These parameters affect the accuracy of the analysis. In normal circumstances however, the user is advised not to deviate from the values advised.

1. the number of expansion wave directions: This number sets the number of expansion wave directions used in the modeling of coupling between elements. An expansion wave is a physical wave present in the planar structure traveling between the elements. It is evident that for each element expansion waves in all directions are emitted (outgoing expansion waves), and expansion waves are coming in from all directions (incoming expansion waves). Setting the number to a certain value means that 1. the outgoing expansion waves of the element types are calculated rigorously in a number of directions, in between interpolation is used, and 2. the element types are solved rigorously for the expansion waves coming in from a number of directions, in between

- interpolation is used. Setting 0 means that you do not want to take into account coupling between elements. Setting the advised value 8 means that you specify the directions $\Phi=0, \pi/4, \pi/2, 3\pi/4, \pi, 5\pi/4, 3\pi/2, 7\pi/4, 2\pi$.
2. the number of points per free space wavelength: This is the number of equidistant spatial points per free space wavelength at which the Green's functions are calculated. The advised value is 500.
 3. Threshold for rigorous GF calculation: This parameter determines up to which distance the Green's functions are calculated rigorously. Above the threshold the Green's functions are approximated by their expansion wave terms, which in fact consists of an asymptotic expansion for large arguments. The threshold is expressed in free space wavelengths.
 4. the number of points per k_0 : Some spectral integrals are calculated numerically. This number sets the number of points used for the numerical evaluation of the integral within an interval of size k_0 . The advised value is 30. If the value given is too small the engine automatically will increase it up to a suitable value.
 5. complex images for inverse Fourier transforms: value zero invokes the slower, but more accurate integration procedure for the inverse Fourier transform, value 1 invokes the Discrete Complex Images Method (DCIM), which is much faster, but a bit less stable.
 6. Testing: choice between Galerkin or razor blade type testing. **GALERKIN CAN ONLY BE USED IN CASE NO WALLS ARE PRESENT.**
 7. EEF-use: This parameter determines whether the user wants to use subsectional Edge Expansion Functions: yes \Rightarrow type "1", no \Rightarrow type "0". These expansion functions incorporate the exact behavior of the currents near the edges and increase the convergence of the analysis in terms of the number of expansion functions. In this MAGMAS release, the subsectional edge expansion functions are only effectively used on the rectangular segments of patches and lines. They are not used on the triangular segments of patches and on apertures and slots.
 8. Reciprocity: this property can be explicitly used or not used in the calculation of the Green's functions.
 9. designer parameters: only for experienced users.

4.2.4.f Optimization parameters

Choose the button "Optimisation Parameters" to enter the corresponding subwindow. Within this window you can enter whether you want to use the optimisation mode or the plot mode and how you want to use it. Optimisation within MAGMAS is an iterative process that searches for the values of a number of input variables in order to reach certain values for a number of output variables. The search is performed in certain intervals for the input variables. The plot mode allows to make plots of output variables in terms of input variables. In the top part of the subwindow the input variables are defined, in the bottom part the output variables are defined.

1. the choice of the mode: With the "Next" button you can select either the optimisation mode (opt), the plot mode (plot), or the regular frequency sweep mode (off).
2. the number of input variables: This number sets the number of input variables. With the "Add" and "Delete" buttons you can add or delete an input variable.
3. the current input variable's number: This number sets the rank number of the input variable under consideration.
4. Pushing the "Layer" button expresses that this input variable is a layer parameter, pushing the "Component" button expresses that this input variable is a component parameter. With the "Next" button the layer or component to consider can be selected. The format for the selection of a layer is SubiLj which indicates layer j in subregion i.
5. the input variable: With the "Next" button the actual input variable can be chosen. The layer parameters that can be selected are the thickness (Thickness), the real and imaginary part of the permittivity (Re(Eps) and Im(Eps)), and the real and imaginary part of the permeability (Re(Mu) and Im(Mu)). The component parameters that can be selected are the X-position, the Y-position, the Rotation, the X-scale, the Y-scale, and the Scale of a patch or aperture. In the future, more parameters will be included.
6. the lower boundary and the upper boundary: They define the interval in which is searched or plotted.
7. the number of points for a plot, only used in the plot mode
8. the number of output variables: This number sets the number of output variables. With the "Add" and "Delete" buttons you can add or delete an input variable.

9. the current output variable's number: This number sets the rank number of the output variable under consideration.
10. the output variable: the format for the selection of an output variable is S_{ij} , Z_{ij} , Y_{ij} . S indicates that an S parameter, Z that a Z parameter, and Y that an Y parameter is selected. i and j stand for the row and column number in the S , Z , or Y matrix.
11. the wanted value: The real (Re) and imaginary (Im) part of the wanted value for the output variable under consideration have to be inserted here.
12. the weight factor for the output variable under consideration
13. the cost for the output variable under consideration: The cost is the criterion used to stop the optimization iteration.

4.2.5 The calculate menu

Within this version of MAGMAS, before starting a calculation, you always have to save the planar structure. If you do not save, MAGMAS will analyze the last version saved of the structure. After pushing the "Calculate" button, you get the calculation window, where you have several buttons to organize the calculation procedure. Only direct calculation is supported within this MAGMAS release. This is invoked by pushing the "OK" button. It is possible to do an analysis by starting the analysis engine by hand, instead of using the user interface (see section The analysis engine).

4.2.6 The View menu

Under this menu the results of the analyses can be visualized. You can visualize network parameters (N parameters, S parameters, Z parameters, Y parameters), radiation parameters (far fields of single ports, far fields of the complete structure), current graphs, and optimization plots. With the "Close All Graphs" button you can erase all graphs from the screen.

4.2.6.a Network parameters

Choosing the button " N parameters" allows to visualize the "natural" network parameters of the structure. The natural parameters relate the natural inputs of the ports to the natural outputs of the ports. In case of a line feed, the natural input and output are the incoming and outgoing fundamental mode on the corresponding line; in case of a coaxial feed, the natural input and output are the magnetic current and the magnetic field in the coaxial aperture; in case of an active aperture, the natural input and output are the magnetic current and the magnetic field in the aperture; in case of an active patch or wall, the natural input and output are the electric current and the electric field on the patch. Important are the cases where only line feeds or only coaxial feeds are used. In these cases the natural parameters correspond to the S parameters (referenced to the characteristic impedances of the ports in question) or the Y parameters, respectively. Choosing the button " S parameters" allows to visualize the scattering parameters referenced to 50 Ohm. Choosing the button " Z parameters" allows to visualize the impedance parameters, choosing the button " Y parameters" allows to visualize the admittance parameters. All four are treated in the same way. A subwindow is generated where the number and type of graphs is managed. Using the "Previous" and "Next" buttons you can select the current graph. Using the "Add" button you can add a graph. This causes the generation of the port selection subwindow. Using the "Delete" button you can delete the current graph. Using the "Edit" button you can edit the current graph. This also causes the generation of the port selection subwindow. You can also set the type of graph: "Real" = show the real part, "Imaginary" = show the imaginary part, "Amplitude" = show the amplitude, and "Phase" = show the phase. Real and imaginary part are mostly used for Z and Y parameters, amplitude and phase are mostly used for S parameters. Up to four graphs can be defined. They are all shown in the same figure.

In the port selection subwindow you select the ports between which you want to show the coupling. Using the top "Previous" and "Next" buttons you can select the source element or source line feed. In the case of a source element using the "Previous" and "Next" buttons below you can select the source port within the source element. Using the "Previous" and "Next" buttons below this you can select the observation element or observation line feed. In the case of an observation element using the "Previous" and "Next" buttons at the bottom you can select the observation port within the observation element.

PAY ATTENTION: THE ORDER OF THE ACTIVE PATCH AND APERTURE PORTS WITHIN AN ELEMENT IS NOT NECESSARILY THE ORDER IN WHICH THESE PORTS WERE DEFINED. The numbering is done in the following way: the layer interfaces in which the

active patches are located are considered from right to left; within a layer interface the order of the patches is the order in which they were defined.

4.2.6.b Radiation parameters

Choosing the button “Far Fields Single Ports” allows to visualize the far field patterns of the complete structure with only one port excited, the source port. The other ports are terminated with their characteristic impedance. A subwindow is generated. Using the top “Previous” and “Next” buttons you can select the source element or source line feed. In the case of a source element using the “Previous” and “Next” buttons below you can select the source port within the source element. **PAY**

ATTENTION: THE ORDER OF THE ACTIVE PATCH, WALL, AND APERTURE PORTS WITHIN AN ELEMENT IS NOT NECESSARILY THE ORDER IN WHICH THESE PORTS WERE DEFINED. The numbering is done in the following way: the layer interfaces in which the active patches are located are considered from right to left; within a layer interface the order of the patches is the order in which they were defined.

With the “Left” and “Right” buttons you can choose in which half space you want to observe the far field. With the “Previous” and “Next” buttons below you can insert the far field cut you want to see. First you select the azimuth angle for the left side of the cut, then the azimuth angle for the right side of the cut. In the case question marks appear, this means that no far fields were calculated. Finally you select the frequency at which you want to observe the far field, and the graph type: “Amplitude”, “Phase”, or “Axial Ratio”.

Choosing the button “Far Fields Structure” allows to visualize the far field patterns of the complete structure with all ports excited in the way given in the excitation part. A subwindow is generated. With the “Previous” and “Next” buttons below you can insert the far field cut you want to see. First you select the azimuth angle for the left side of the cut, then the azimuth angle for the right side of the cut. The azimuth angle is the ϕ -angle (spherical coordinates) of the cut. In order to get a traditional pattern choose the right azimuth angle equal to the left azimuth angle + 180° . The cut starts at the negative z-axis, sweeps over 180° to the positive z-axis and back over 180° to the negative z-axis. In the case question marks appear, this means that no far fields were calculated. Finally you select the frequency at which you want to observe the far field, and the graph type: “Amplitude”, “Phase”, “Axial Ratio”, or “Gain”. For “Amplitude” and “Phase” the result consists of two curves, one for the θ -component and one for the ϕ -components.

The radiation efficiency (radiated power divided by input power) of a structure is given as a message at the end of the calculation for each frequency point at which the far field is determined (see “Message” section). This efficiency is calculated using only the far field directions in which the far fields were calculated. This means that in cases where the far field pattern strongly varies in terms of the far field direction, the efficiency calculated may be completely erroneous.

4.2.6.c Currents

The visualization of currents is not supported within this MAGMAS release.

4.2.6.d Optimization plots

In the plot mode one or more output variables can be shown in terms of a single input variable. You can also set the type of graph: “Real” = show the real part, “Imaginary” = show the imaginary part, “Amplitude” = show the amplitude, and “Phase” = show the phase.

4.2.7 The Print menu

Under this menu the graphs of the view menu can be printed to a file or to a printer, the graph data can be written in a file, and the full S parameter matrix can be written in a file in cityfile format in order to be able to incorporate the results into ADS. The setting of the default printer is also done under this menu.

4.2.7.a Printing a graph

Choosing the button “Print a Graph” allows to print a graph to a file or to the printer. A subwindow is generated. At the top you can select whether to print to a file or to a printer with the “Print to file” and “Print to printer” buttons. When the print to file option is chosen you get a subwindow where you can enter the directory where the file has to be put and the name of the file. With the top “Change” button

you can still change the file directory and file name, and with the bottom “Change” button you can change the printer. At the bottom you can enter which graph to print.

4.2.7.b Writing the graph data in a file

Choosing the button “Write Graph Data to File” allows to write the graph data of the last graph shown on the screen to the file graph.dat in ascii format. The first column is the abscis, the second, third, etc., are the ordinates.

4.2.7.c Exporting an S matrix to ADS

Choosing the button “Export S matrix to MDS” writes the S matrix of the structure in a file **name_mds** where name is the name of the planar structure. This file can be imported into MDS. This means that in a design MDS can use results generated by MAGMAS. Pay attention to the fact that MDS works with S parameters referenced to 50 Ohm instead of with S parameters referenced to the characteristic impedances of the ports in question. This is automatically taken into account by MAGMAS.

4.2.7.d Configuring the default printer

Choosing the button “Configure Printer” you get a subwindow where you can set the default printer.

4.2.8 The Info menu

Choosing this button generates a subwindow where you get information about the MAGMAS software and its development team.

5. MAGMAS messages, warnings and errors

MAGMAS has three types of messages to the user: “messages”, “warnings”, and “errors”.

5.1 Messages

The goal of a message is to give normal information to the user about the analysis procedure. After a message is given, without stopping the analysis engine continues the analysis.

The radiation efficiency (radiated power divided by input power) of a structure is given as a message at the end of the calculation for each frequency point at which the far field is determined.

5.2 Warnings

The goal of a warning is to give information to the user about:

1. changes the MAGMAS framework has made to the input parameters in order to enhance the stability of the numerical analysis procedure,
2. the fact that the structure to analyze is such that some stability boundary is being approached.

After a warning is given, without stopping the analysis engine continues the analysis. Warnings are written in the file WARNINGS, which can be consulted after the analysis.

5.3 Errors

The goal of an error is to give information to the user about the fact that a certain input parameter given to the MAGMAS framework causes a problem which cannot be solved automatically by the framework; the parameter, the problem with this parameter, and the measures which can be taken by the user are described in detail;

After an error is given, the analysis engine stops.

There are two types of errors: errors which can only be solved by recompiling the MAGMAS source code or memory violation errors, and errors which do not require a recompilation of the MAGMAS source code or input errors.

5.3.a Memory violation errors

Since the solution of such an error requires a modification of the source code and a recompilation (the fact that a recompilation is necessary is explicitly mentioned in the error), these errors cannot be solved by the user. If they occur, this means that the specific MAGMAS version under consideration contains

intrinsic memory violations. Normally these errors only occur during installation. If such an error does occur, please contact the MAGMAS developing team.

5.3.b Input errors

Since the solution of such an error does not require a modification of the source code, it can be solved by the user. For each such an error, the (straightforward) measure(s) to take are given in detail by the MAGMAS framework itself. Therefore, they are not listed in this user manual. If such an error is not absolutely clear to you, please contact the MAGMAS developing team. They will adapt the error message given in order to clarify things in the next release.

There are two subtypes of input errors: the physical errors and the numerical errors.

Physical error

This type of error occurs when the user has inserted a planar structure which goes beyond the possibilities of the specific MAGMAS version under consideration. In this case this MAGMAS version cannot handle the physical structure targeted.

Example:

PHYSICAL ERROR: the number of subregions is too large

MEASURE: decrease this number from ... to maximum ...

The error means that the user has inserted a planar structure with a number of subregions higher than allowed for this specific MAGMAS version. It is evident that the only thing that can be done is to diminish the number of subregions.

Numerical error

This type of error occurs when the user wants to analyze a planar structure with a theoretical (extremely high) accuracy going beyond the possibilities of the specific MAGMAS version under consideration. The theoretical accuracy is defined as the accuracy that can be reached with the same basic MAGMAS version but using a computer with infinite memory and infinite speed.

Example:

NUMERICAL ERROR: the number of basis functions on aperture ... of element type ... is too large

MEASURE: decrease this number from ... to maximum ...

The error means that the user has inserted an aperture with a number of basis functions higher than allowed for this specific MAGMAS version. His goal was probably to get an extremely high accuracy by using a high-performance meshing. The MAGMAS version installed on the computer used however prohibits this due to the restrictions on the computer memory. A reduction of the number of segments on this aperture may solve the problem.

6. References

- [1] The MAGMAS framework: general physical structure
- [2] The MAGMAS framework: the modeling procedure